

VENTILATION / FANS

AIR TRANSFER KIT CONTROLLER

Full Automatic control is now available for our complete range of Air Transfer Kits. Just set the temperature you desire on the easy to read dial, switch the unit to Auto and let the thermostat do the rest.

Once the heat in the room reaches the desired temperature the controller automatically turns on and moves the heated air into the other rooms via the Air Transfer System. When the heat in the room drops 1.5 - 2 DegC° the controller automatically switches off again saving cold air transfer. Especially good system before retiring for the night.

- Auto on/off switch
- Switches automatically on temperature rise.
- Switch positions included for continuous on and off settings.
- Switching voltage AC 24 - 250 V AC.
- Set point adjustment with knob.

ORDER CODE	590
PRICE	

Thermostat Control



SPEED CONTROLLER

Our Speed Controller suits operation with most of our in line fans (Westaflex manufacture) and give the end user a greater control of required airflow.

ORDER CODE	591
PRICE	

Speed Contoller



All prices **DO NOT** include GST.

www.westaflex.com.au